

Dimension: 1.59" w x 0.23" h

WATERPROOF MULTI-TRIM

Multi-trim can be used for both floors of equal and unequal height. Can also be used as a surface reducer.

Automatically adjusts to varying heights.

1

1 1/8"

Floor

Subfloor

Floor

Install the flooring leaving a 1 1/8" gap between the two floors for the installation.

Measure and trim to fit.

2

Floor

Subfloor

Floor

Subfloor

Draw a line down the center of the space between floors. Drill 1/4" holes along the line, approximately 15" apart.

3

Slide plugs into the slot on the transition and align with the pre-drilled holes.

4


With a rubber mallet, hammer the plugs into the holes until flush.

Floor

Subfloor

Floor

Subfloor

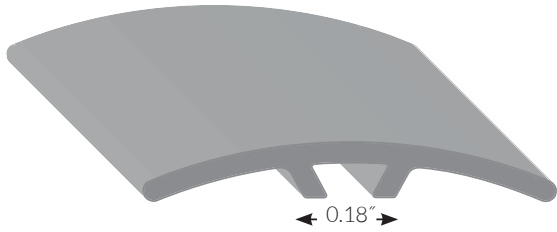

Dimension: 1.59" w x 0.23" h

WATERPROOF MULTI-TRIM

Multi-trim can be used for both floors of equal and unequal height. Can also be used as a surface reducer.

Automatically adjusts to varying heights.

1

1 1/8"

Floor Subfloor Floor

Install the flooring leaving a 1 1/8" gap between the two floors for the installation.

Measure and trim to fit.

2

Floor Subfloor Floor Subfloor

Draw a line down the center of the space between floors. Drill 1/4" holes along the line, approximately 15" apart.

3

Slide plugs into the slot on the transition and align with the pre-drilled holes.

4

Floor Subfloor Floor Subfloor

With a rubber mallet, hammer the plugs into the holes until flush.